



PLAN - FLAT / 1:8

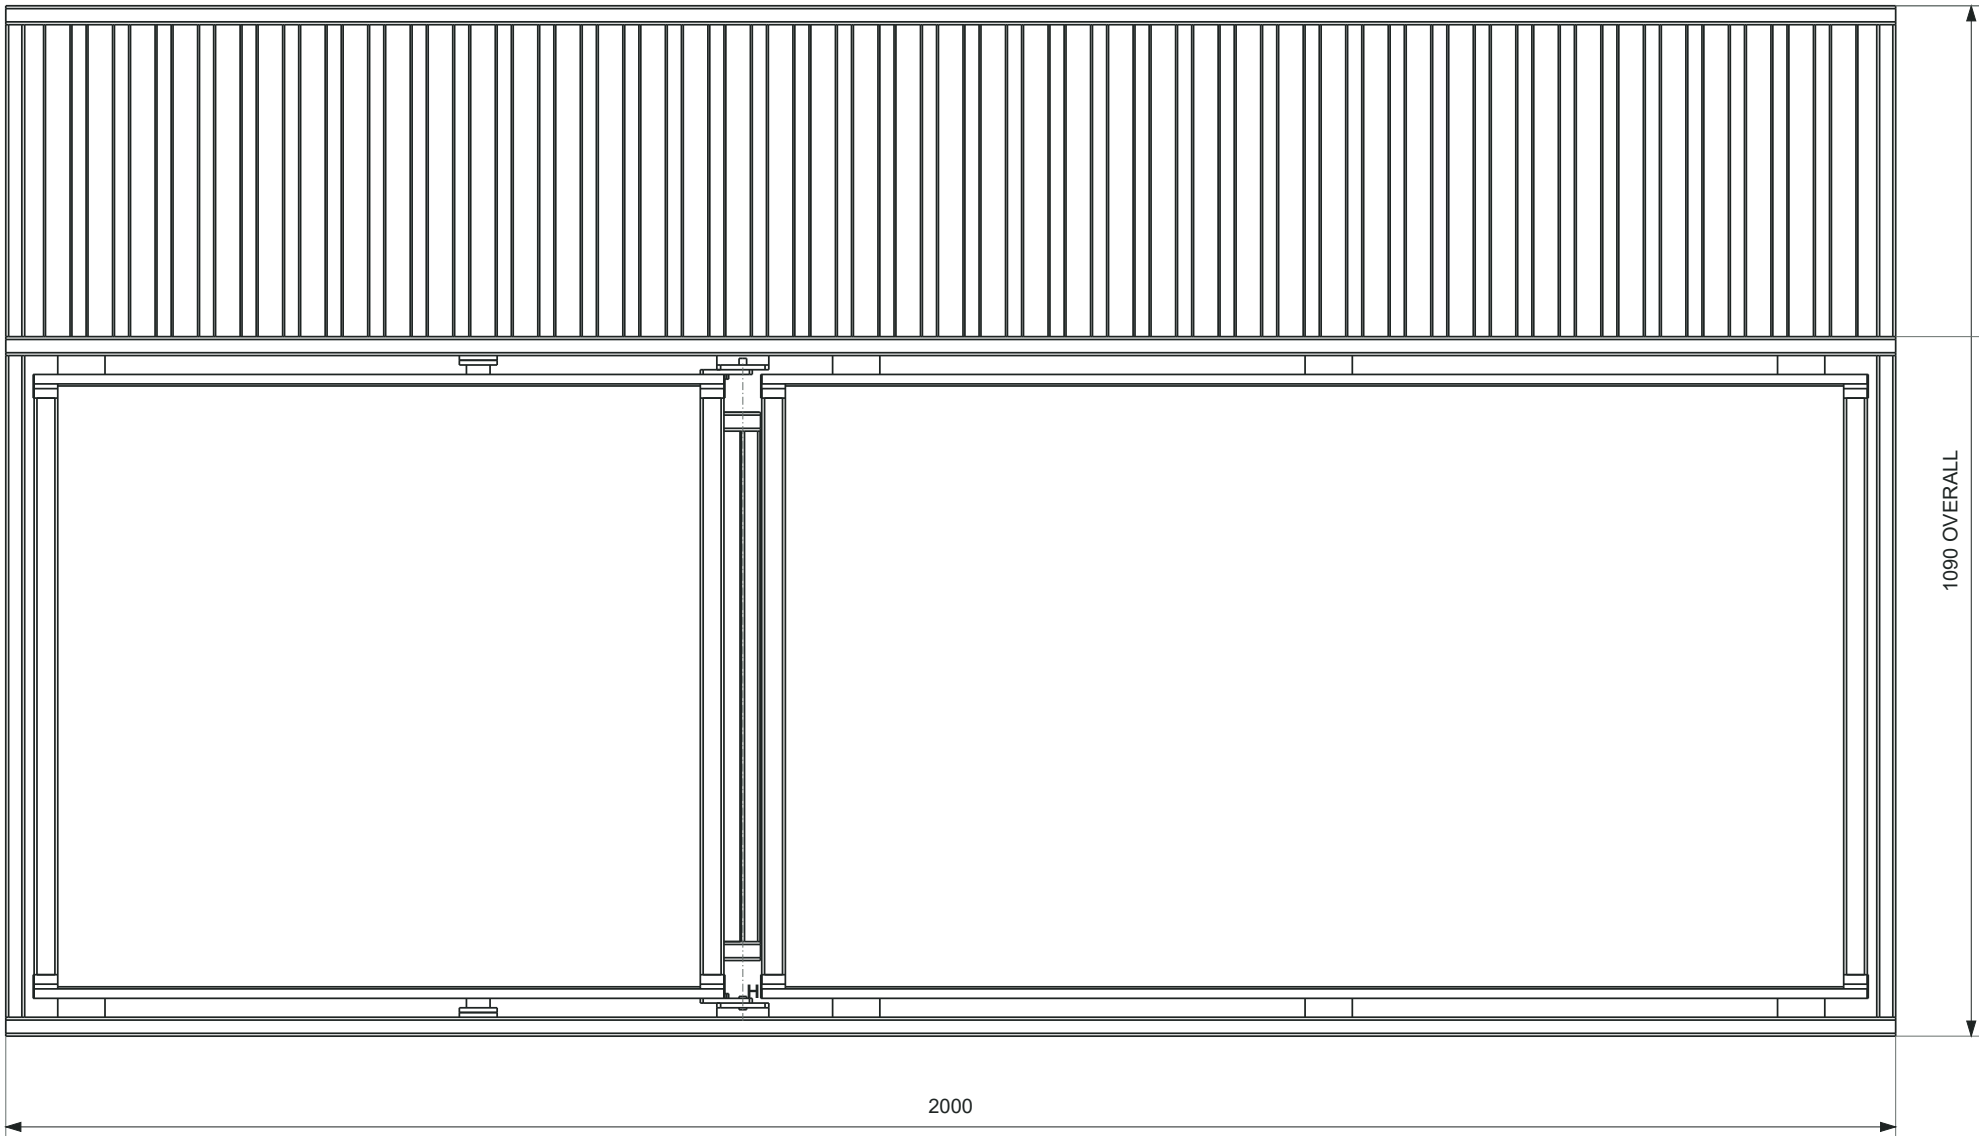

ISOMETRIC / NTS

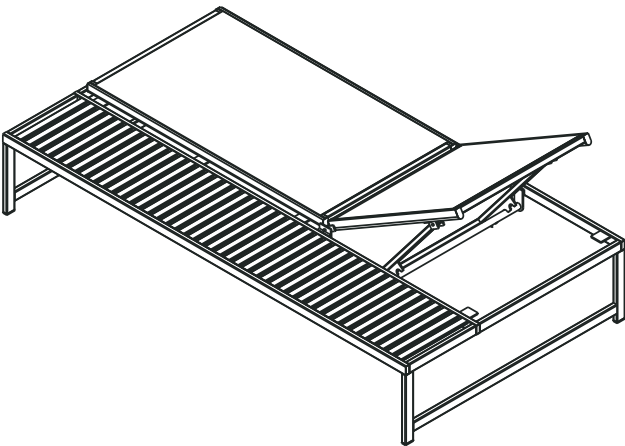


REV H DIMENSIONS


DESCRIPTION	mm
Overall length	2000
Overall width	1090
Main bay	740
Table extension	350
Table clear span	330
Frame top	340
Sling nominal top	376

350 is measured from the outer face of the shared divider to the outer edge of the table.


SIDE - FLAT / 1:8

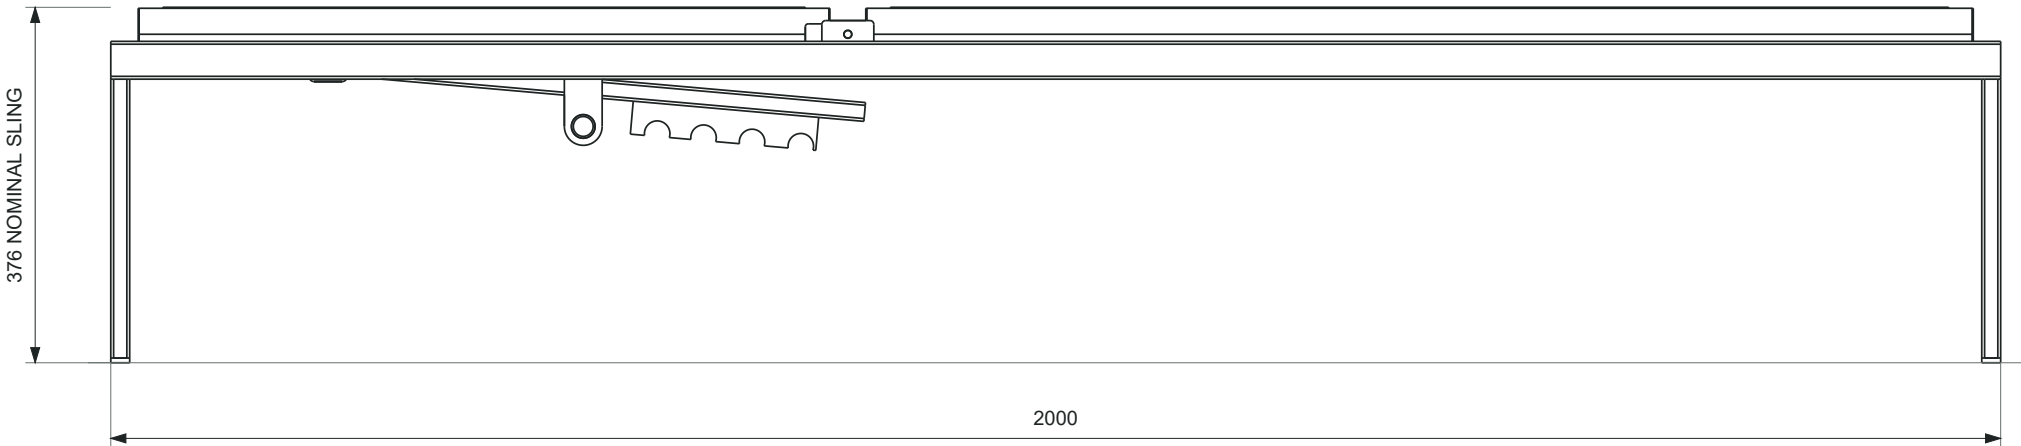

FOOT END - FLAT / 1:10

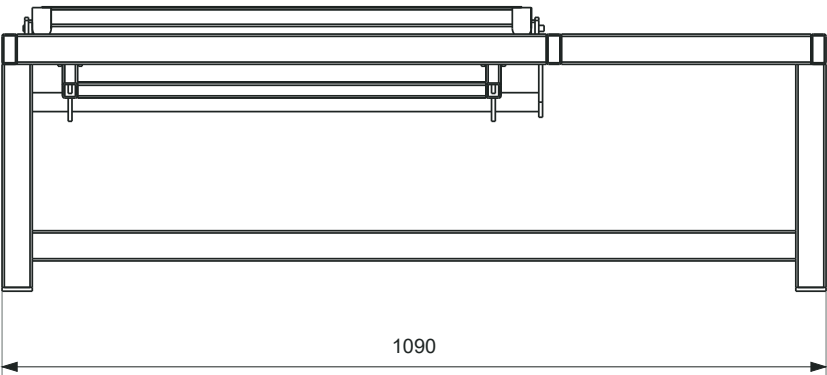

PLAN / 1:8

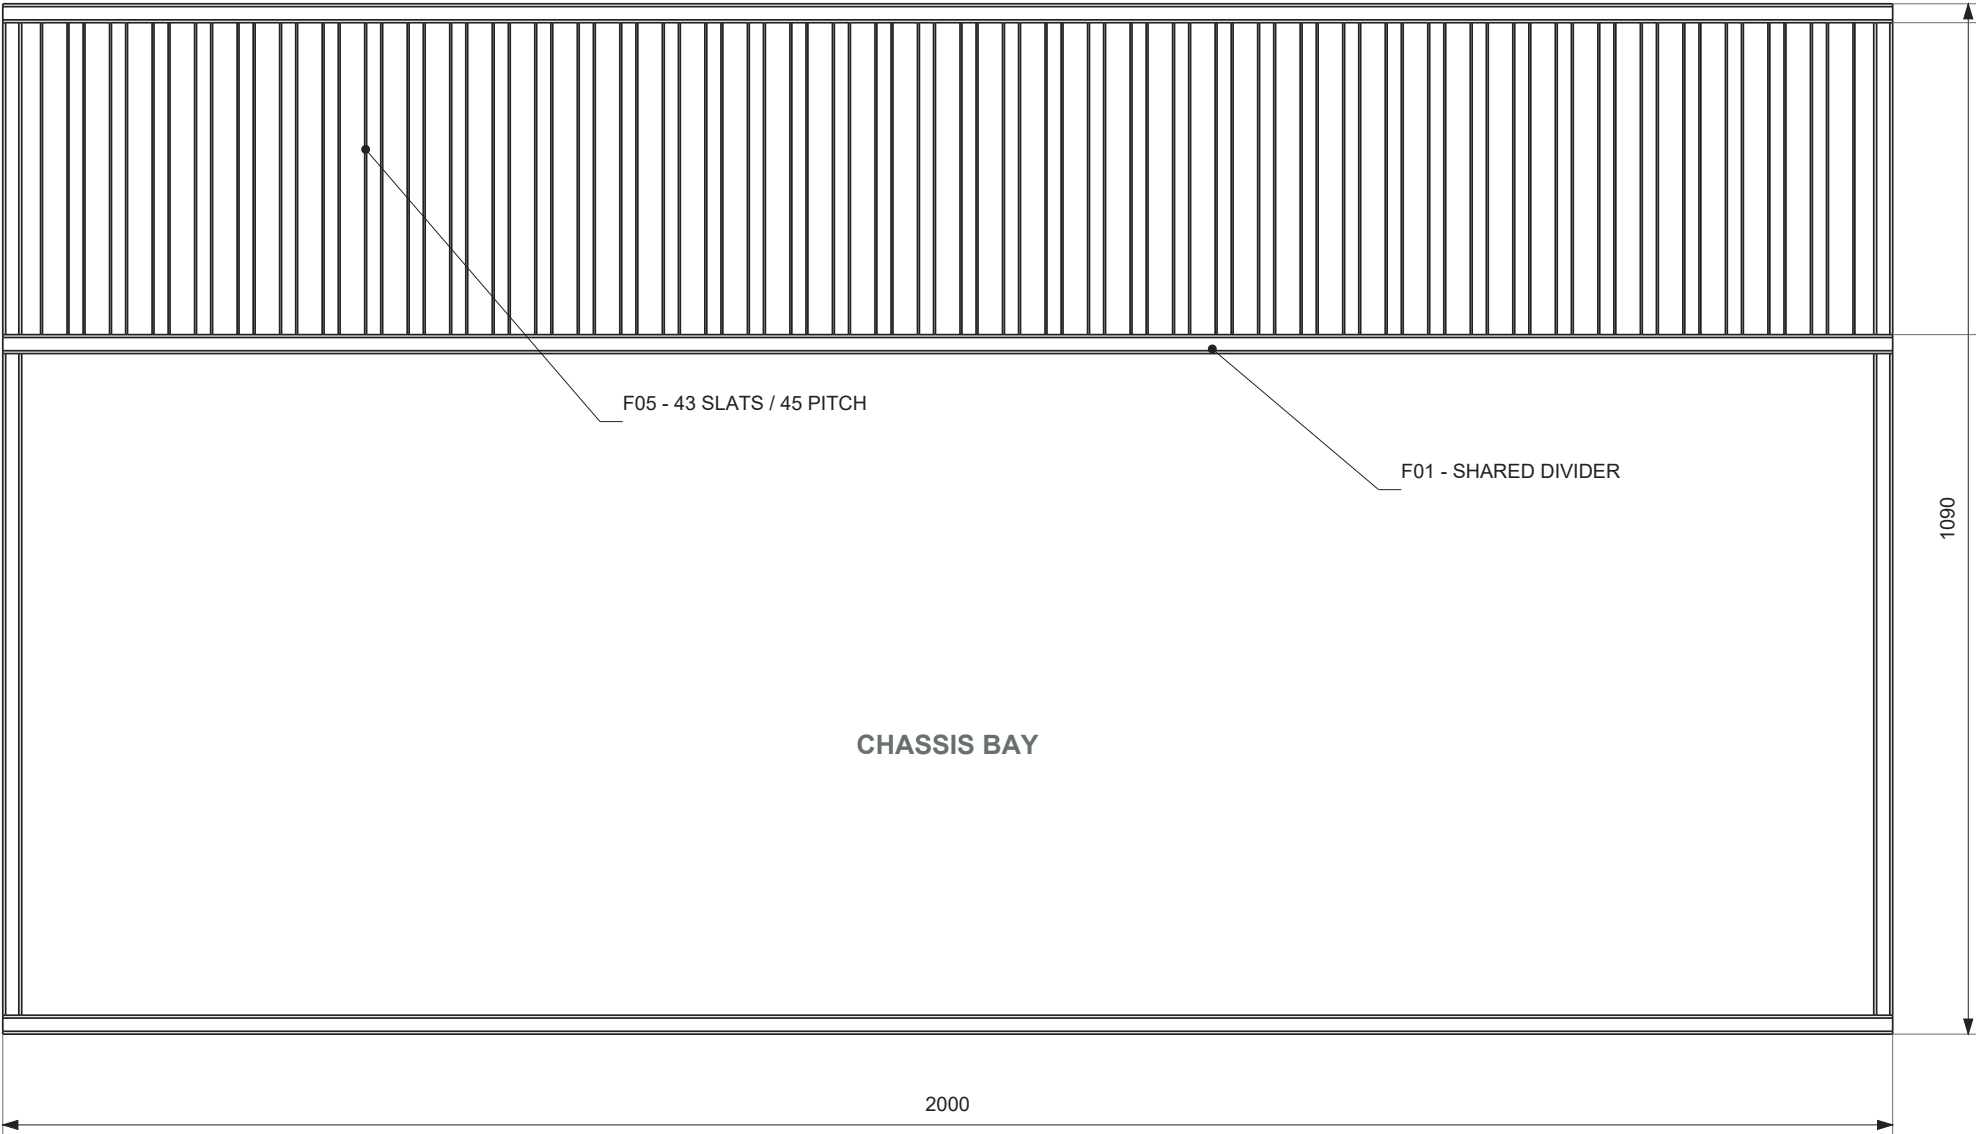

SIDE / 1:8



F04 legs start at Z=5; 5 mm foot pads supplied separately.

CUT SCHEDULE

CODE	QTY	LENGTH mm
F01	3	2000
F02	2	700
F03	2	330
F04	4	295
F05	43	330
F07	2	1010

AL = aluminum; alloy/temper TBC.

Main rails: AL 40 high x 20 wide x 2.

Legs / lower rails: AL 20 x 40 x 2.


Slats: 30 wide x 10 high x 1.2.

Slat X centers: 55 + 45n.


n = 0...42; last center = 1945.

Other tube sizes: proposed for review.


END VIEW / 1:12.5

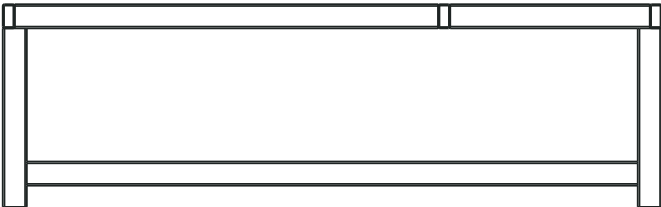

STOCK SECTIONS / 1:1

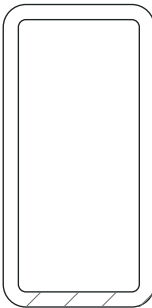


F01/F02/F03/F07

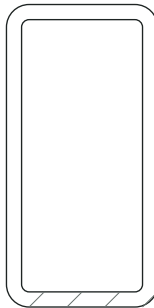


F04: X20 / Y40

PLAN - SLATS OMITTED / 1:10

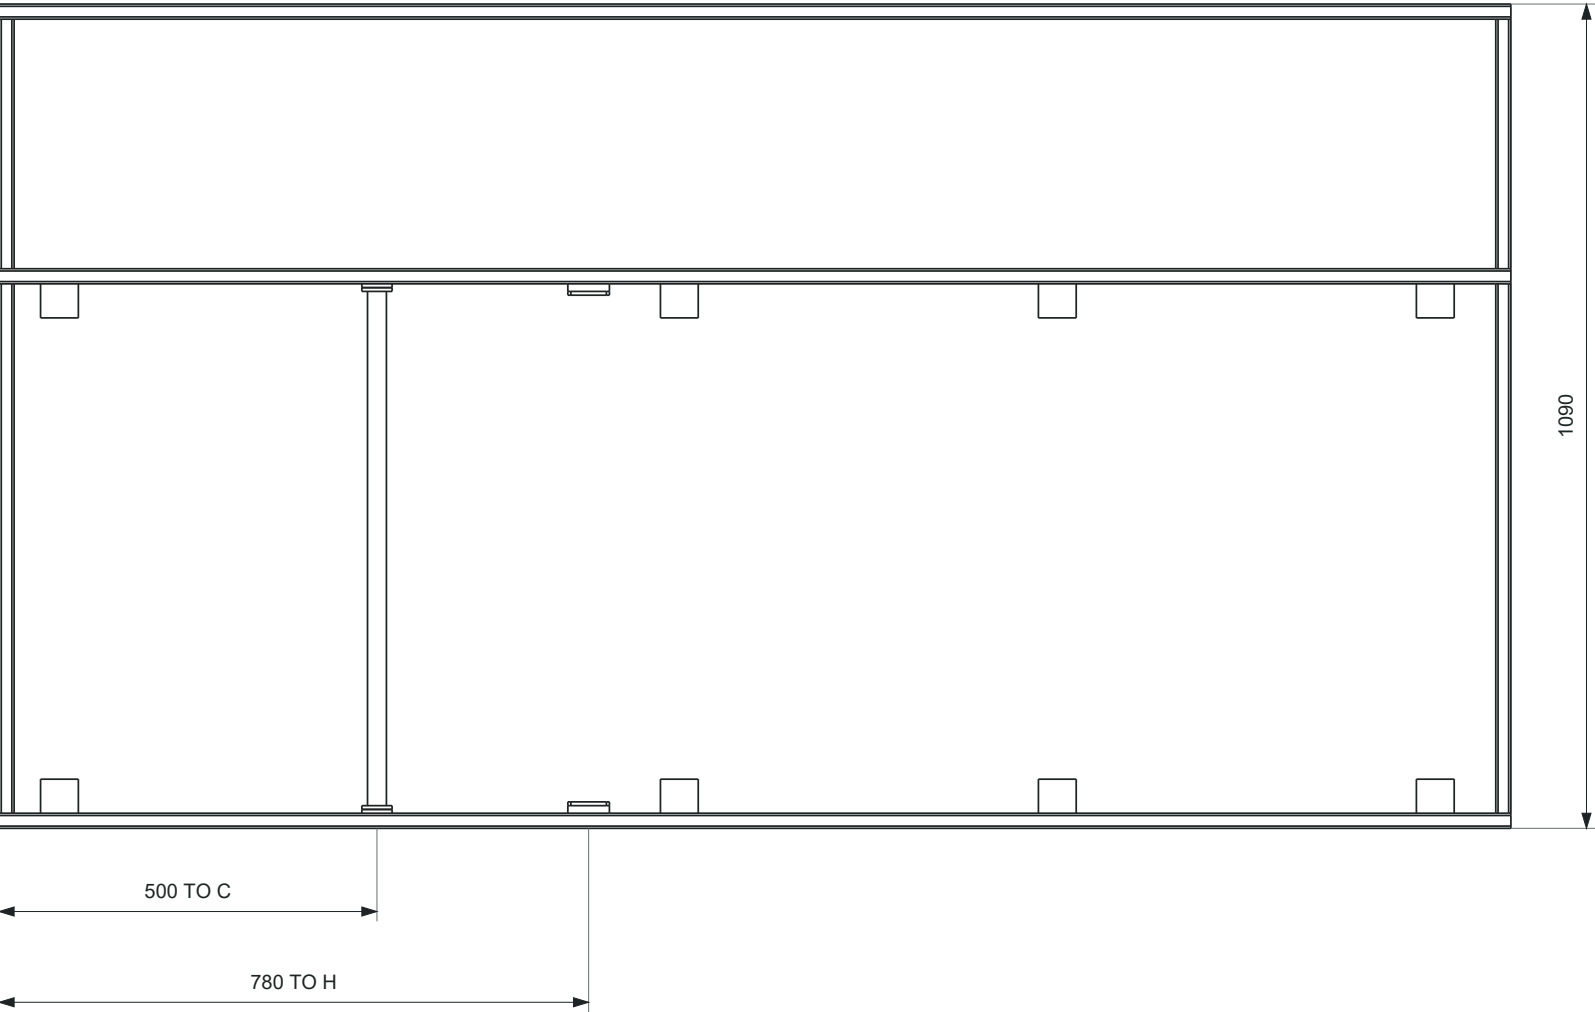

HEAD HALF - SIDE / 1:5

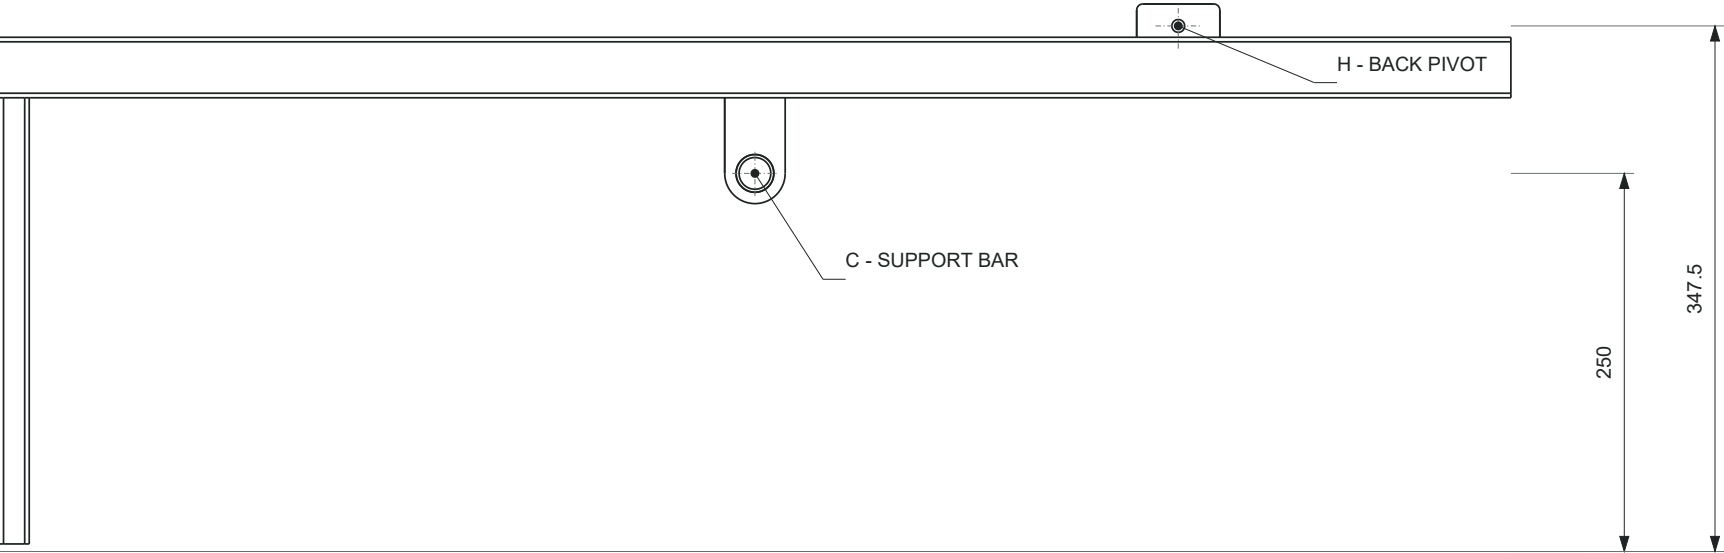


FIXTURE DATUMS

X=0: head end of 2000 mm chassis.
Y=0: outer face opposite the table.
Z=0: floor under the 5 mm foot pads.

FEATURE	X CENTER	Y / Z
H / pivot	780	Y=32.5 / 707.5*
H / pivot		Z=347.5
C / fixed bar	500	Z=250
F06 tabs	900, 1400, 1900	Y=40 / 700
P02 stops	80	Y=40 / 700
F04 legs	10 / 1990	Y=20 / 1070

* H01 plate center planes; pin axis runs along Y.
F06: 50 x 50 x 5 plate, top at Z=335.
P02: 50 x 50 x 5 pad, top at Z=335.
C bar ends: Y=25 and 715 (690 overall).
M01 lug base: Z=230; top: Z=325.

F06 MOUNTING TAB / 1:1

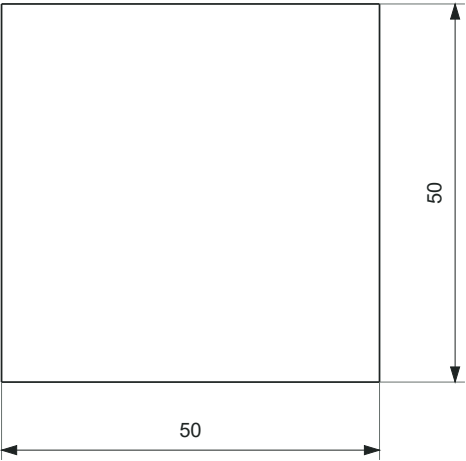


QTY 6
PLATE 5
No holes in
this blank.

Set H and C in one fixture before finish welding.



CROSS TUBES / 1:1

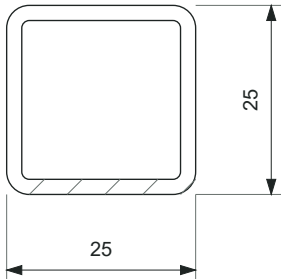

S02 / B02: 2 WALL

CODE	QTY	LENGTH	STOCK
S01	2	1170	SP01 / 25 x 40 / 3 wall*
S02	2	610	SHS 25 x 25 x 2
B01	2	730	SP01 / 25 x 40 / 3 wall*
B02	2	610	SHS 25 x 25 x 2


*SP01 outer size inferred; wall 3 confirmed. See 13.

Seat frame installed X=800...1970, Y=40...700.


Back frame flat X=30...760, Y=40...700.

Cross tubes raised 15; top Z=375. Feed mesh at rail ends.

BACK FRAME / ISOMETRIC NTS

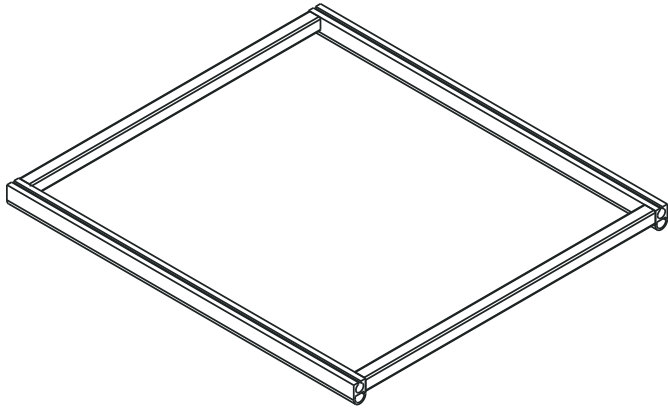

H01 / QTY 2 / PLATE 5 / 2:1

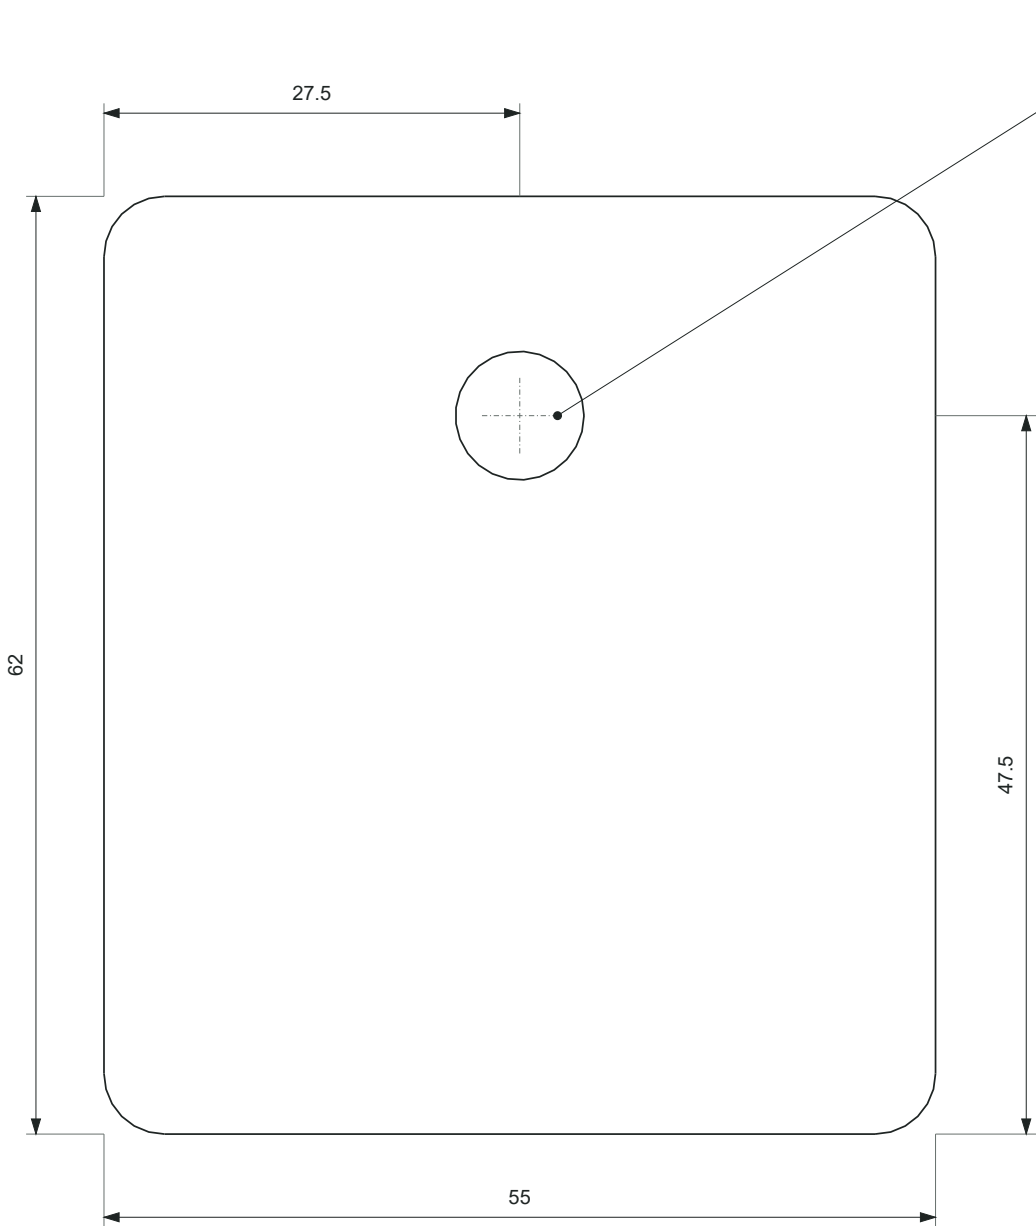


H01 fixed plate: X=752.5...807.5, Z=300...362. External corners R4.

H02 local plate: s=-10...45 about H; n=-11...11.

Use matched left / right bracket locations.


DXF contours are 1:1, without kerf allowance.

H02 / QTY 2 / PLATE 5 / 2:1

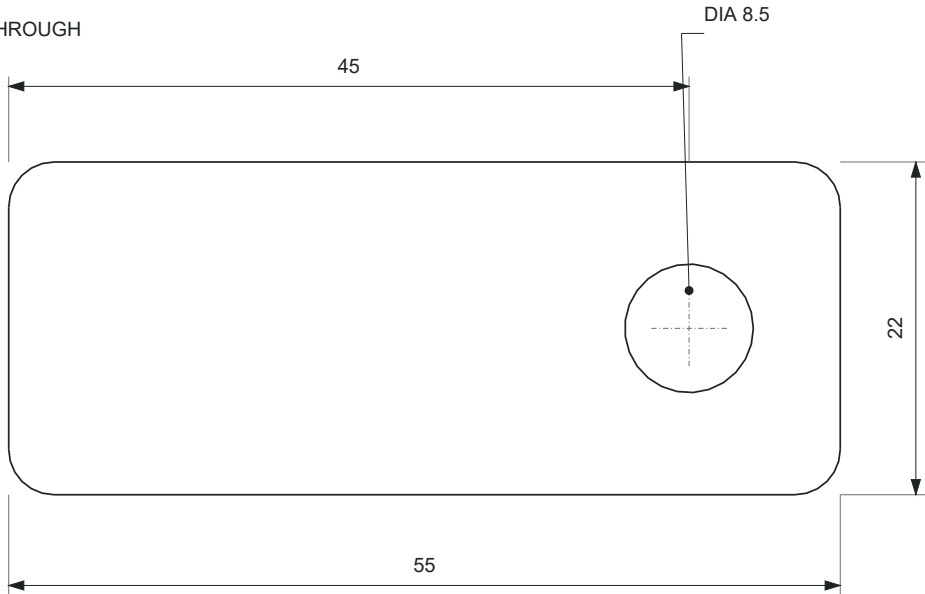


Hole centered at 11 from either long edge.

H03 / QTY 2 / PLATE 5 / 2:1

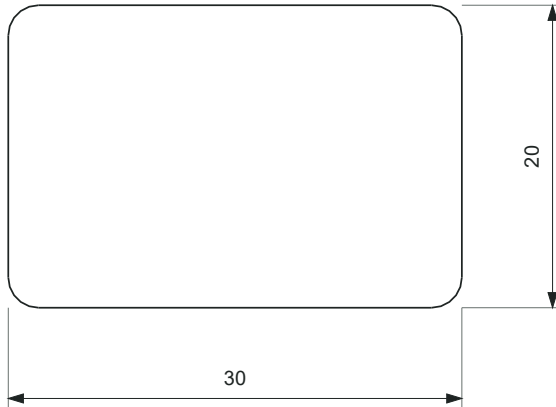

Tongue connection bridge.

PIVOT FIT-UP / ISOMETRIC NTS

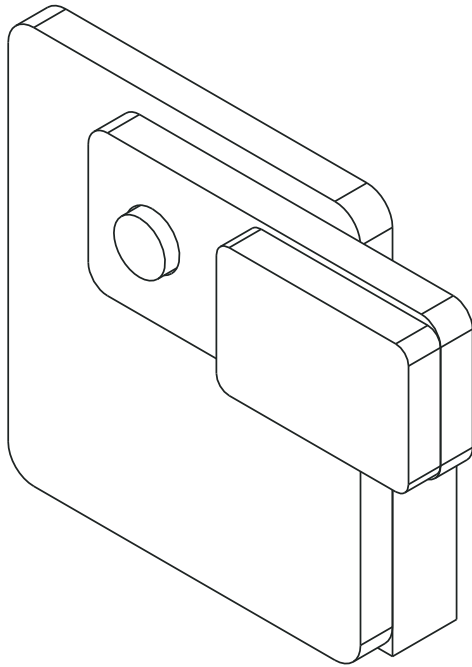


JOINT DETAIL - RELEASE HOLD

Nominal DIA8 pin; final retained pin, bush


and washer stack require approval.

H05: Y=20...30 and 710...720; Z=300.

H05 / QTY 2 / PLATE 10 / 1:1

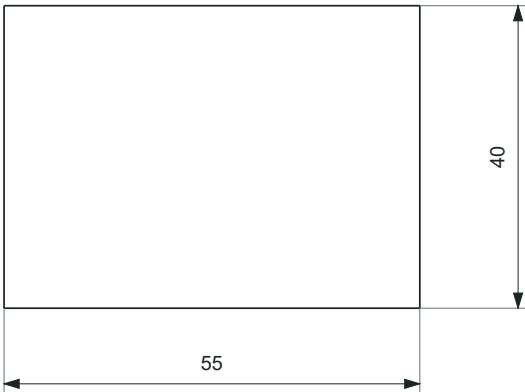


M01 / QTY 2 / PLATE 5 / 3:2

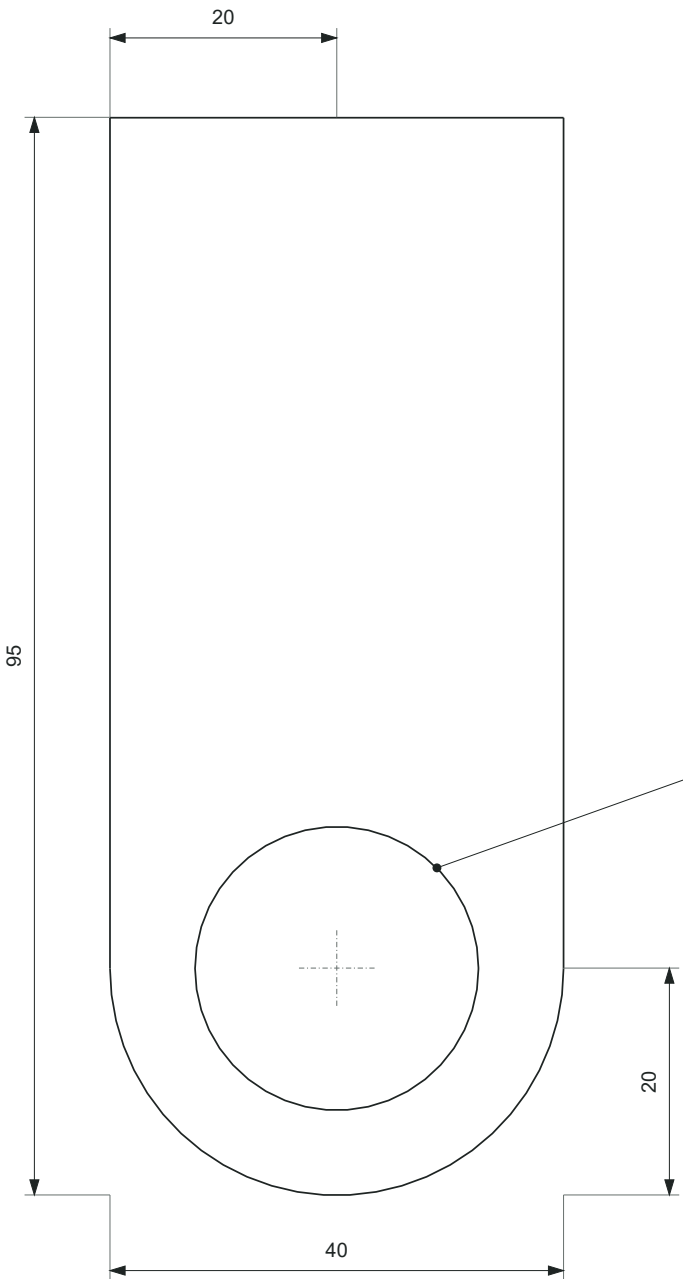


M02 / QTY 1 / TUBE OD25 x 2 / 1:4


Cut square; fit concentrically through both M01 lugs.

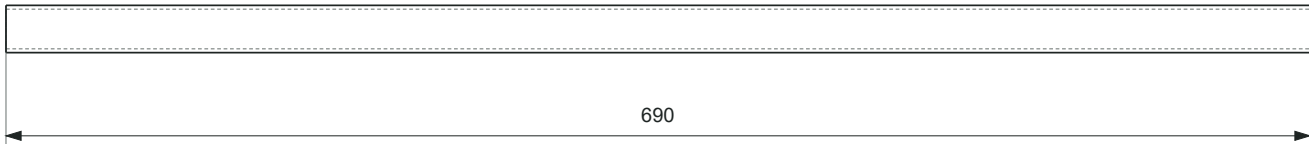


M03 / QTY 4 / PLATE 5 / 2:1

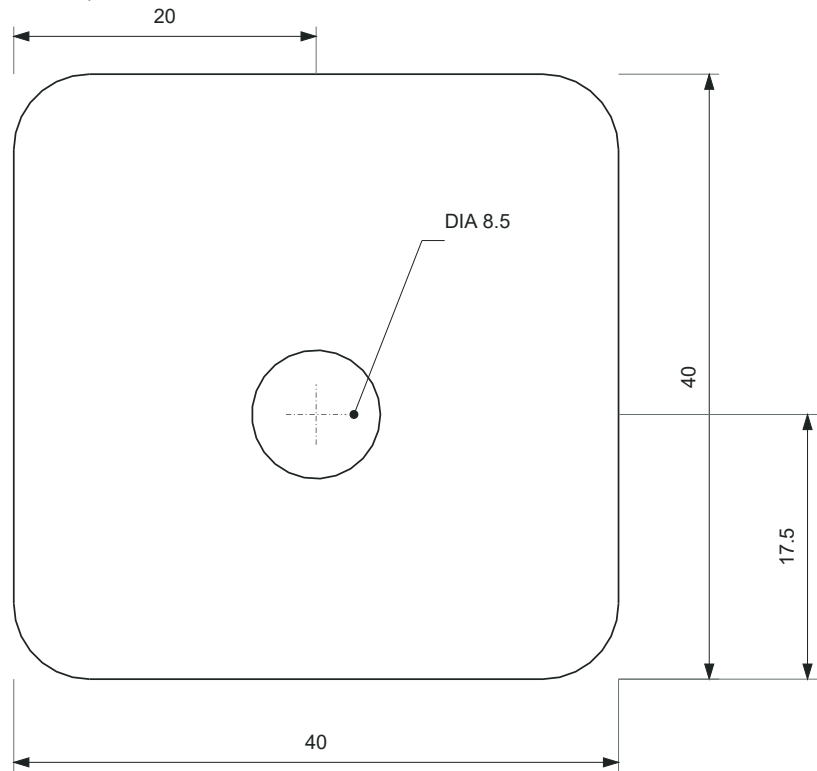

M04 / QTY 2 / PLATE 4 / 3:2

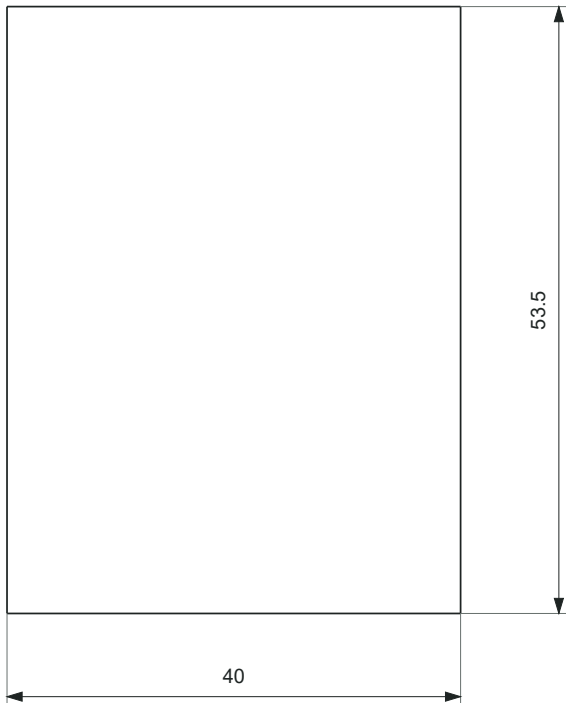


UPPER BRACE MOUNT / NTS

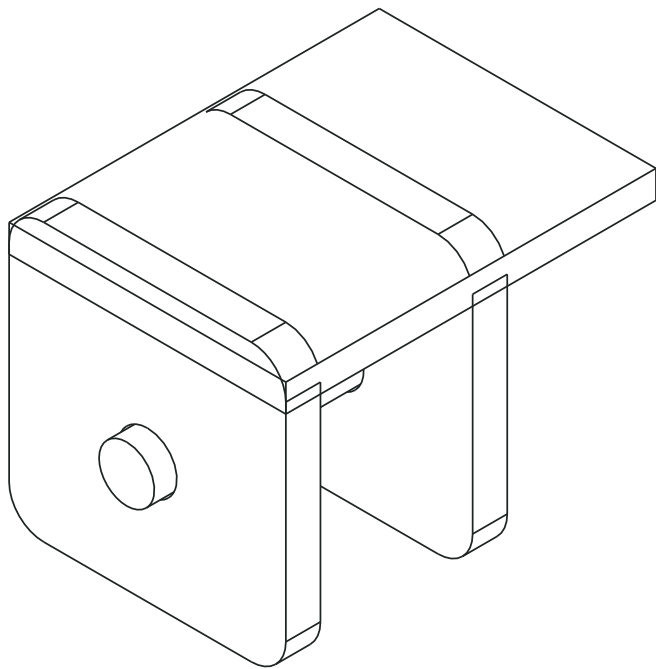

DIA 25 THROUGH / LOWER END R20


M03 ears: 22 clear between plates; 32 overall.
Brace: RHS 20 x 20 x 2, centered between ears.
M04 bridges attach the ears to the back rails.
Upper pivot B: s=550, n=-32.5 from H.
Left/right brace axis Y=90 and Y=650.

M08 / QTY 2 / PLATE 5 / 1:1

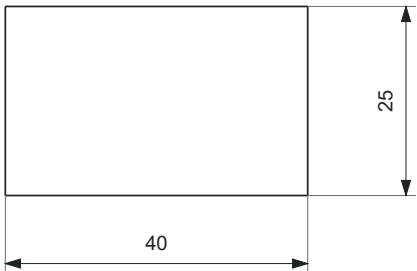


Y=20...25 / 715...720
Z=300 at lower edge

SUPPORT PLAN / 1:3

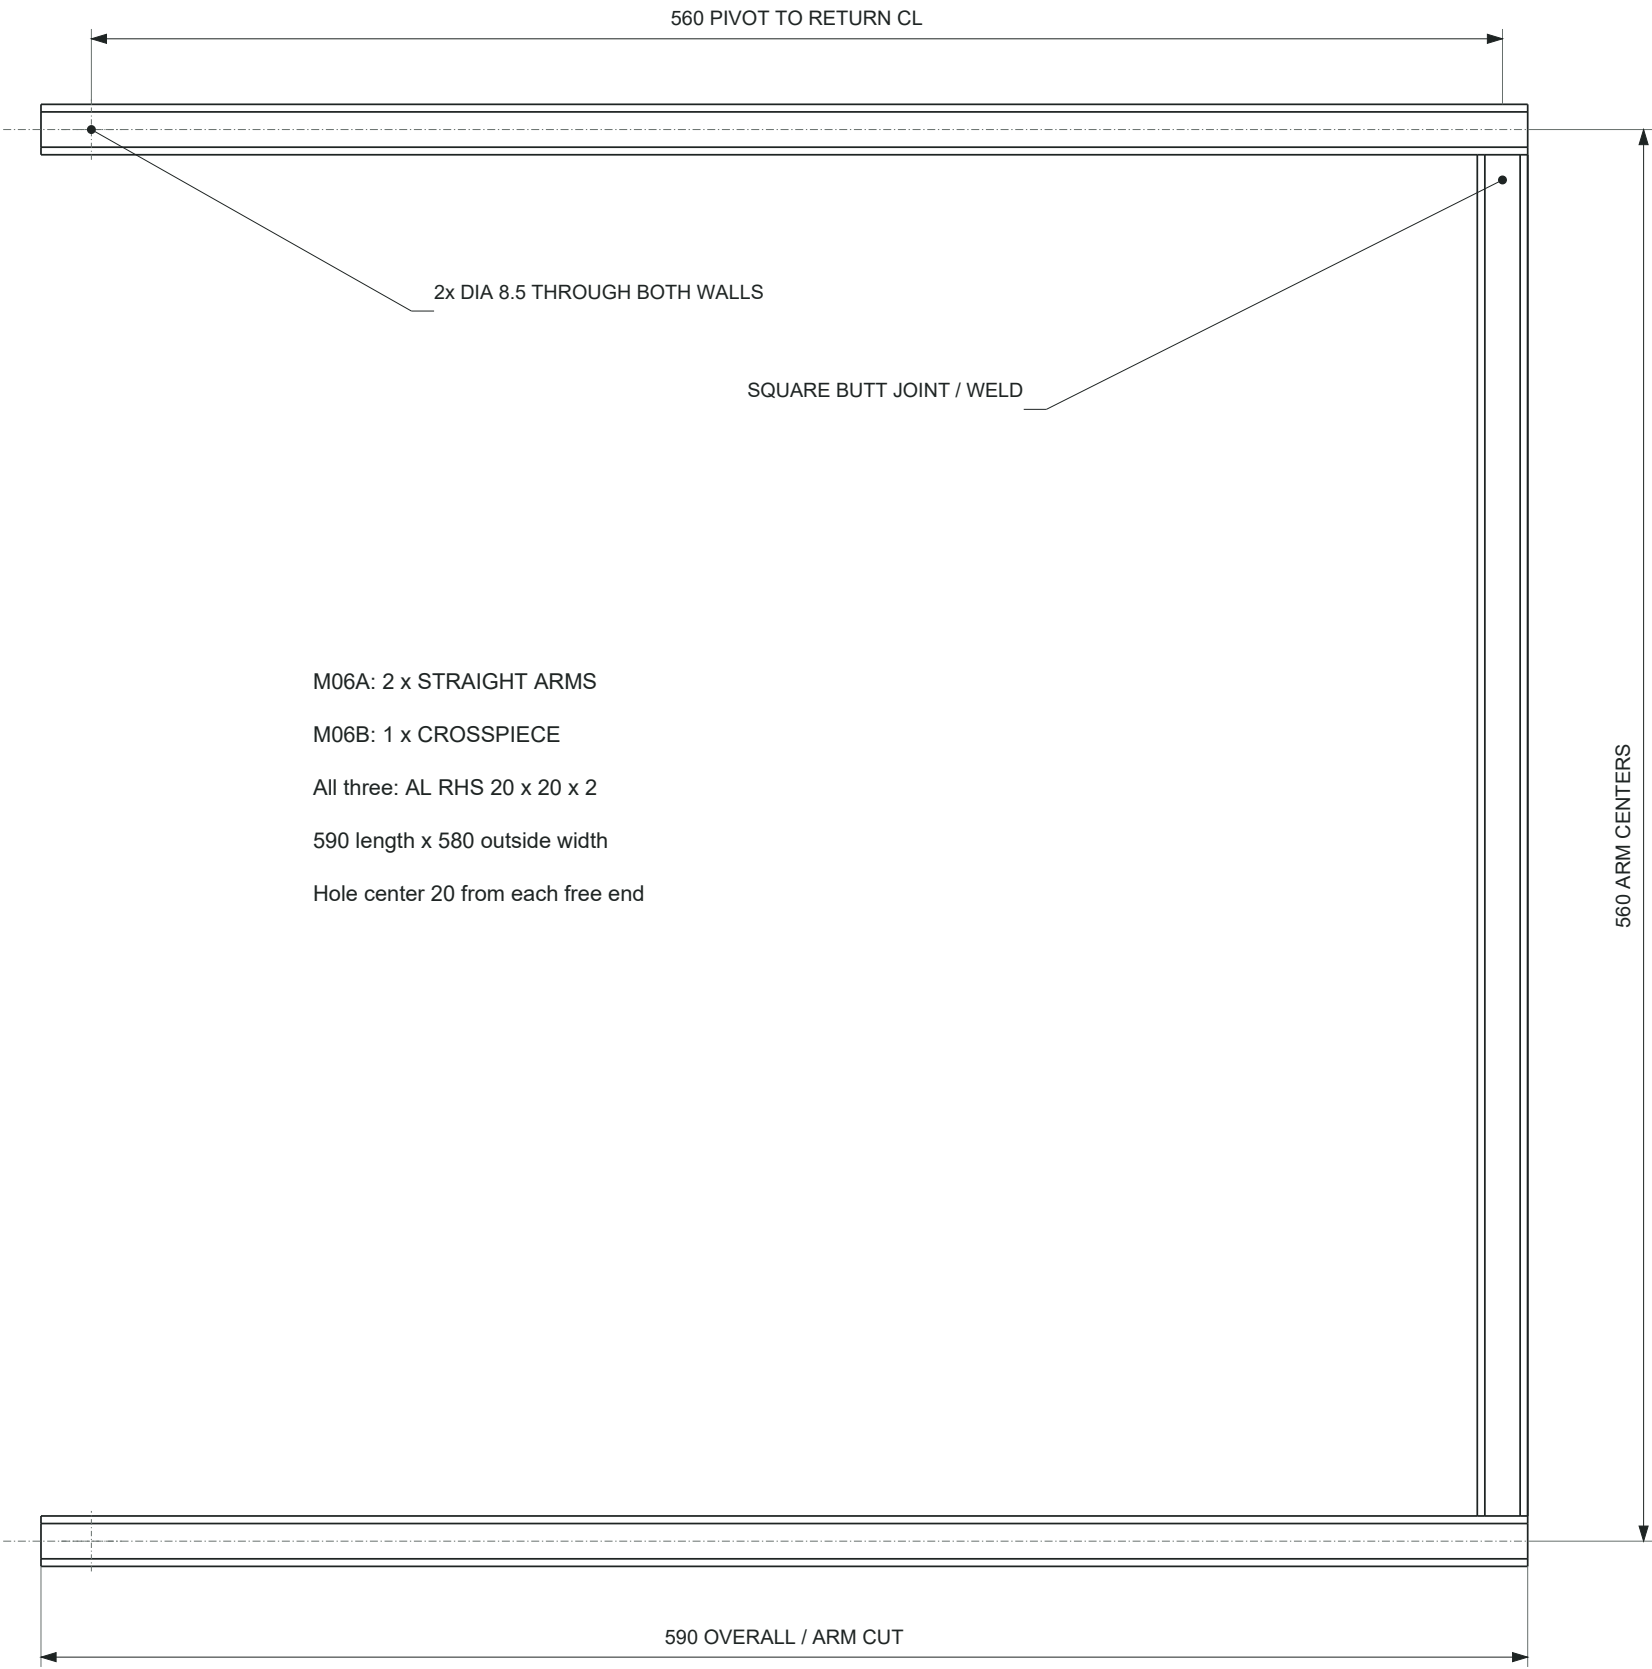

SUPPORT + RACKS / ISOMETRIC NTS

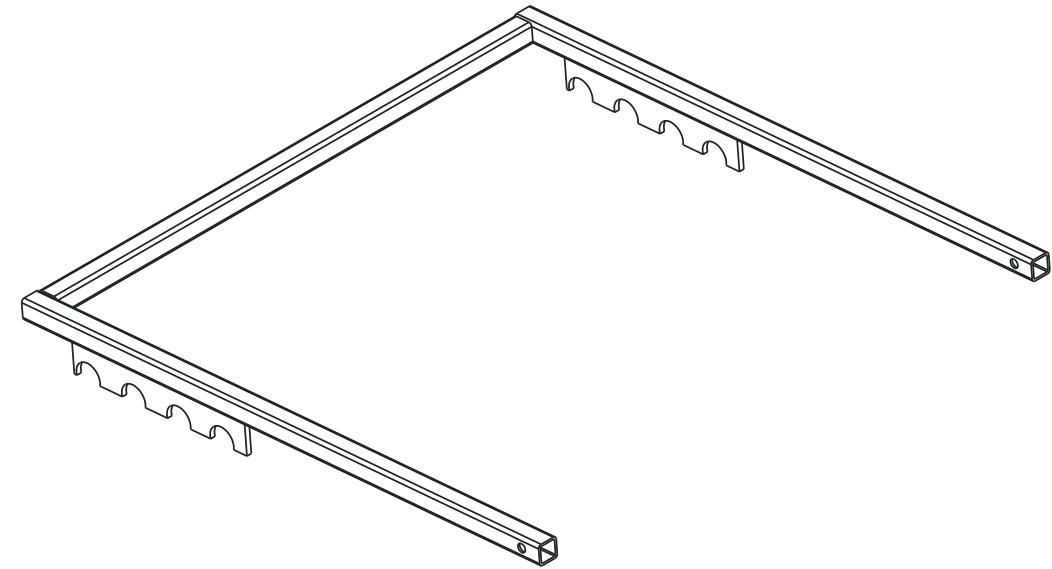

CUT AND FIXTURE DATA

FEATURE	mm
M06A / arm cut / qty 2	590
M06B / return cut / qty 1	540
Outside width	580
Arm center distance	560
Pivot to crosspiece center	560
Hole / from free end	DIA8.5 / 20

Cut all ends square; crosspiece fits BETWEEN arms.

Fixture square and coplanar before welding.

Drill matched pivot holes through both walls.


Rack blank starts 325 from pivot B along the arm.

Racks below support; mouths face the fixed bar.

Weld size, alloy and tube-end closure: review hold.

PROFILE / 2:1 / QTY 2 / PLATE 5

DATUM: lower left of plate = (0,0). DXF units: mm. Contact radius R13.5 at each notch.

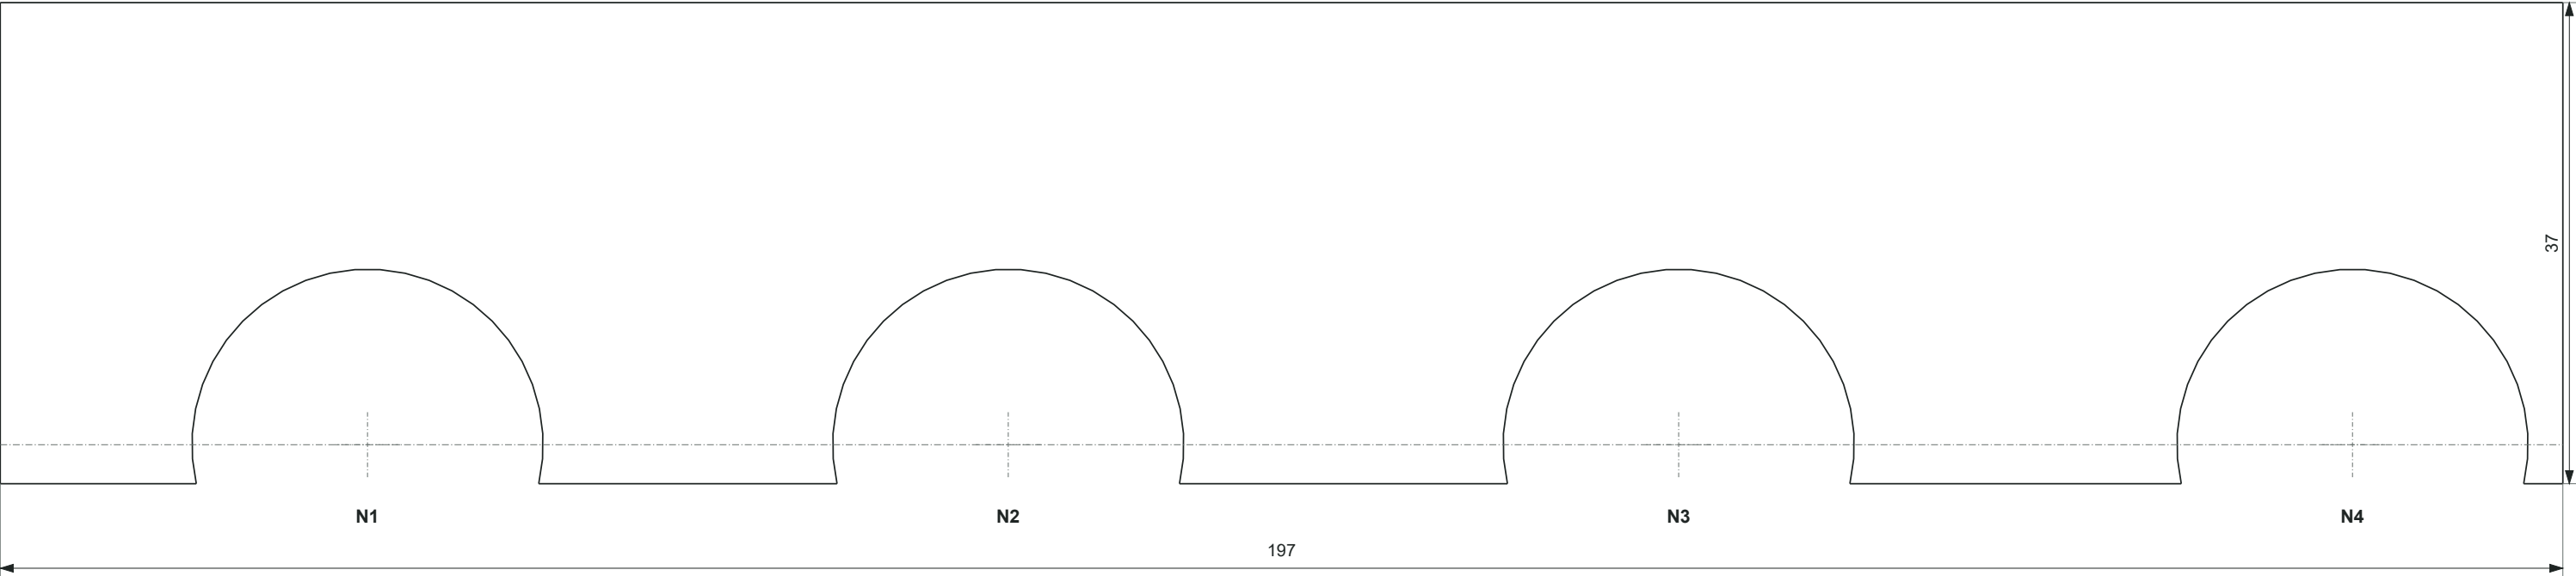

NOTCH	X FROM LEFT	Y FROM BASE	RADIUS	DISTANCE s FROM B	BACK ANGLE
N1	28.235	3.000	13.500	353.235	20 deg
N2	77.491	3.000	13.500	402.491	30 deg
N3	129.029	3.000	13.500	454.029	40 deg
N4	180.829	3.000	13.500	505.829	50 deg

Overall blank 197 x 37 x 5. Local mechanism bounds: s=325...522; offset=-45...-8.

Mount both plates BELOW the U-brace tube with mouths DOWN toward the fixed bar; do not reverse.


OD25 bar / R13.5 notch: 1 mm nominal radial gap. Shown poses are centered, before load take-up.

Deburr both faces and all contact edges. Make left/right plates as a matched pair.

PROFILE CHECK: closed DXF matches the CAD plate volume.

One-degree settling is blocked by the bar; positive retention still requires approval.


20 DEG / NOMINAL ENGAGED / 1:12.5

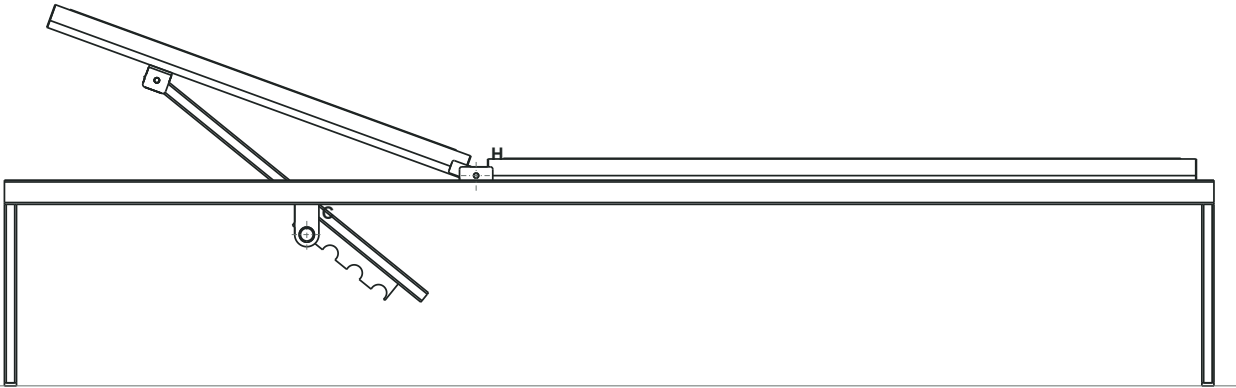

Notch N1 | s = 353.235 | brace-floor gap = 138.4

H=(780,347.5) C=(500,250) B=H + 550e - 32.5n | All coordinates in the longitudinal X/Z plane.


40 DEG / NOMINAL ENGAGED / 1:12.5

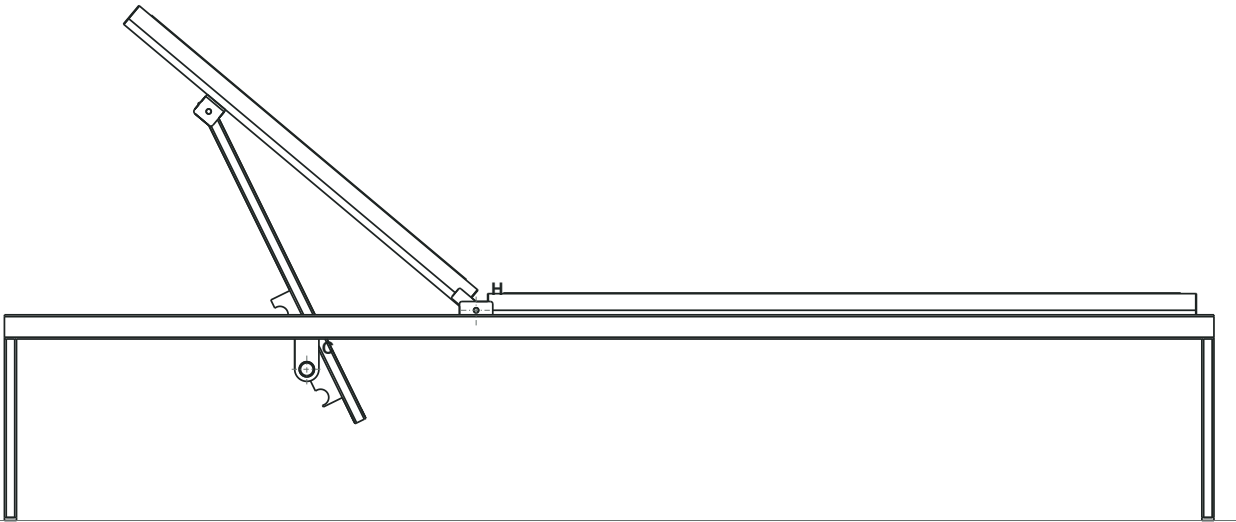

Notch N3 | s = 454.029 | brace-floor gap = 160.0


Engaged positions checked as separate CAD poses. Downward settling is blocked by the bar; adjustment travel still needs prototype verification.

30 DEG / NOMINAL ENGAGED / 1:12.5

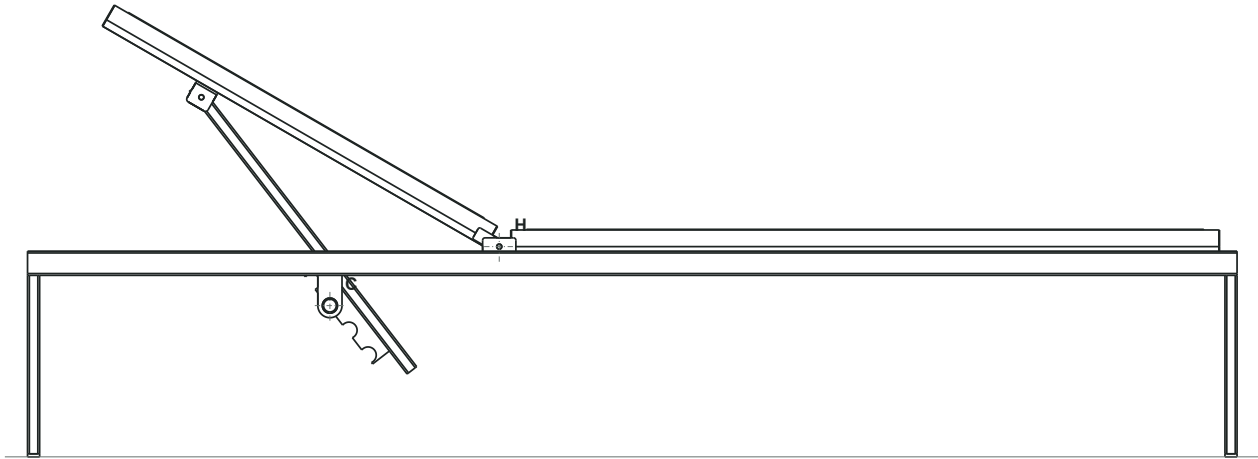


Notch N2 | s = 402.491 | brace-floor gap = 136.9

50 DEG / NOMINAL ENGAGED / 1:12.5

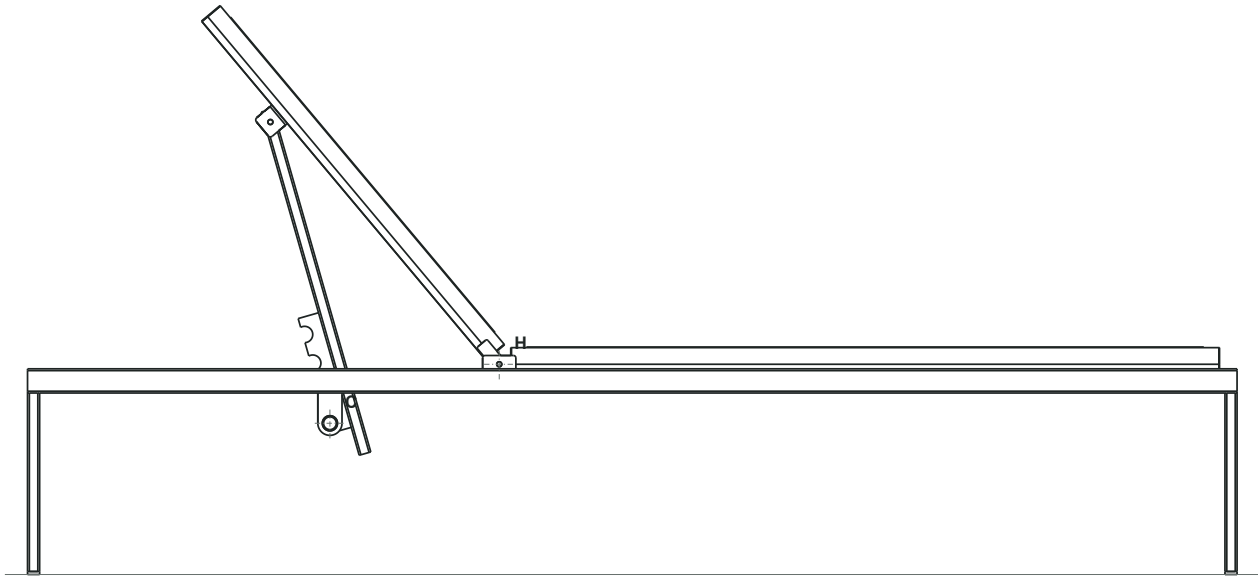

Notch N4 | s = 505.829 | brace-floor gap = 197.1

ASSEMBLY GROUPS / ISOMETRIC NTS

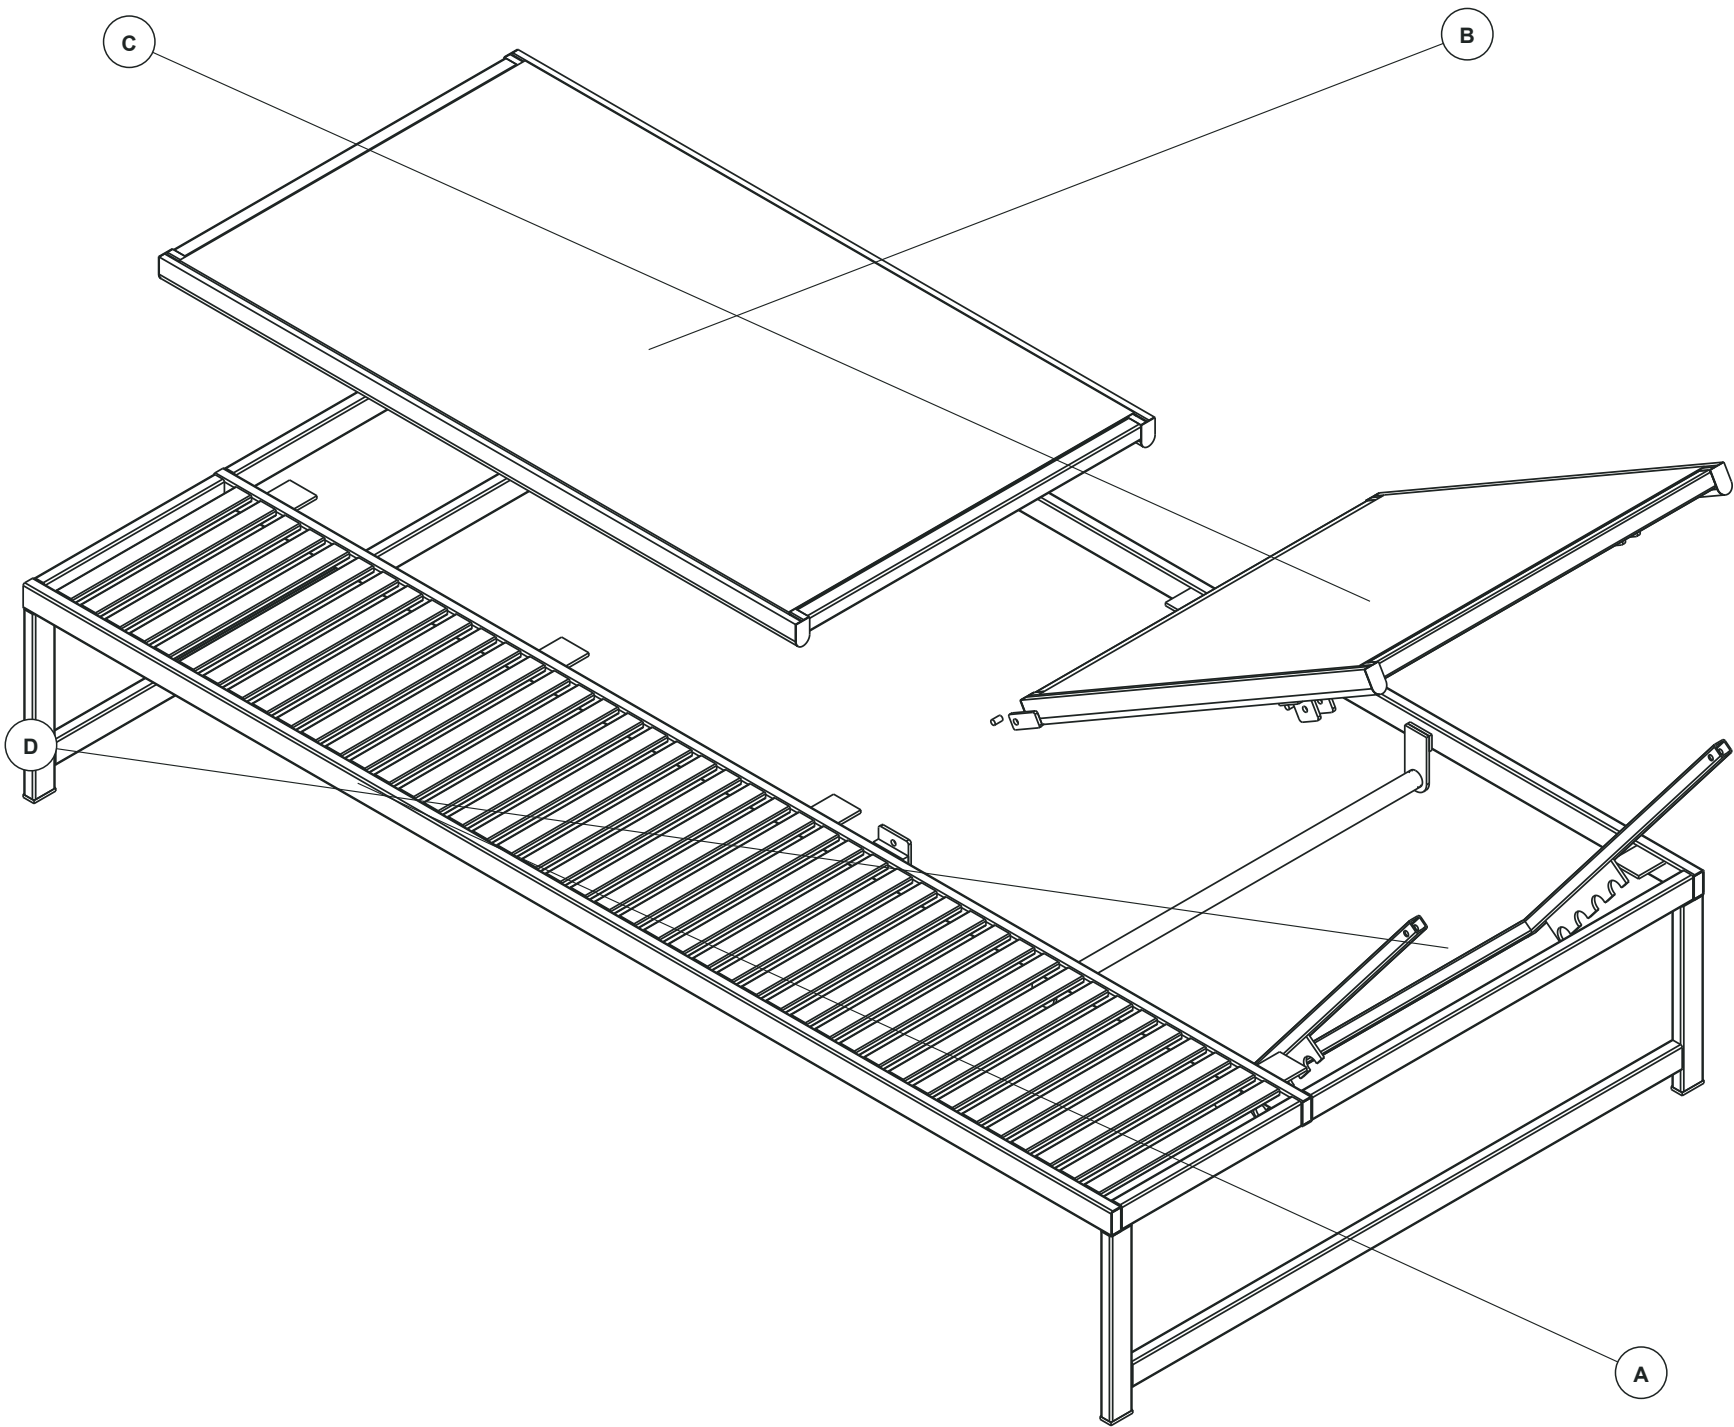

A Chassis + integrated table B Seat frame + sling
C Back frame + upper mounts D U-brace + matched racks
Group separation is illustrative; use detail sheets for joint locations.

CODE	QTY	PART DESCRIPTION
H05	2	Hinge mount pads
M08	2	Lug mount pads
F07	2	Lower end frame rails
F08	6	Main rail end caps
S03	4	Removable seat caps*
B03	4	Removable back caps*
F01	3	Main + divider rails
F02	2	End rails / main bay
F03	2	End rails / table
F04	4	Legs
F05	43	Table slats
F06	6	Seat mounting tabs
S01	2	SP01 seat side rails*
S02	2	Seat cross rails
B01	2	SP01 back side rails*
B02	2	Back cross rails
H01	2	Fixed hinge plates
H02	2	Rotating tongues
H03	2	Tongue bridges
H04	2	Main pins / nominal
M01	2	Support bar lugs
M02	1	Fixed support tube
M03	4	Upper clevis ears
M04	2	Clevis bridges
M05	2	Brace pins / nominal
M06A	2	Welded support arms
M06B	1	Support crosspiece
M07	2	Notched rack plates
T01	1	Seat sling / envelope
T02	1	Back sling / envelope
T05	2	Seat spline / DIA8*
T06	2	Back spline / DIA8*
P01	4	Foot pads
P02	2	Flat back stops

124 modeled bodies / 34 part codes

Main AL tubes only: 6.60 kg

F01/F02/F03/F04/F07; density 2700 kg/m3.

*Profile, spline and cap geometry: proposed.

Alloy / temper and joint design await validation.

ONE COMPLETE CHAISE / MAIN FRAME: ALUMINUM 20 x 40 x 2 / DIMENSIONS mm

CODE	STOCK / BLANK	LENGTH	QTY	DXF FILE	FABRICATION NOTE
H05	Plate 55 x 40 x 10	-	2	H05	Aluminum hinge mounting pads against 20 mm rail
M08	Plate 40 x 25 x 5	-	2	M08	Aluminum support lug mounting pads
F07	AL RHS 40 x 20 x 2	1010	2	-	Lower crossbar between end legs; center Z=60
F08	Plate 16 x 36 x 1.5	-	6	F08	R1 corners; inset flush / dress joint smooth
F01	AL RHS 40 x 20 x 2	2000	3	-	40 vertical / square ends
F02	AL RHS 40 x 20 x 2	700	2	-	Main end rails between long rails
F03	AL RHS 40 x 20 x 2	330	2	-	Table rails / 350 overall extension
F04	AL RHS 20 x 40 x 2	295	4	-	Excludes 5 mm foot pad
F05	RHS 30 x 10 x 1.2	330	43	-	30 along X; 10 vertical / 45 pitch
F06	Plate 50 x 50 x 5	-	6	F06	Mounting tab blank; no holes
S01	SP01 / 25 x 40 x 3*	1170	2	SP01**	Outer size inferred; 3 wall confirmed; open feed ends
S02	SHS 25 x 25 x 2	610	2	-	Seat cross rail / square ends
B01	SP01 / 25 x 40 x 3*	730	2	SP01**	Outer size inferred; 3 wall confirmed; open feed ends
B02	SHS 25 x 25 x 2	610	2	-	Back cross rail / square ends
H01	Plate 55 x 62 x 5	-	2	H01	DIA8.5 / rounded external corners per DXF
H02	Plate 55 x 22 x 5	-	2	H02	DIA8.5 / rounded external corners per DXF
H03	Plate 30 x 20 x 5	-	2	H03	Tongue connection bridge
M01	Plate 40 x 95 x 5	-	2	M01	DIA25 support bar hole / lower end R20
M02	Tube OD25 x 2	690	1	-	Square ends / fixed crossbar
M03	Plate 40 x 40 x 5	-	4	M03	DIA8.5 / external corners R5
M04	Plate 40 x 53.5 x 4	-	2	M04	Clevis bridge plate
M06A	AL SHS 20 x 20 x 2	590	2	-	Square ends; DIA8.5 through both walls, 20 from free end
M06B	AL SHS 20 x 20 x 2	540	1	-	Square butt joint between arms; outside width 580
M07	Plate 197 x 37 x 5	-	2	M07	Exact scalloped DXF; machine as matched pair
T05	Polymer spline DIA8*	1120	2	-	PROPOSED / fit with actual sewn mesh edge; not metal
T06	Polymer spline DIA8*	680	2	-	PROPOSED / final cut and fit by sample; not metal

*SP01 section and DIA8 spline are inferred proposals. Only SP01 wall 3 mm is confirmed. See drawing 13.

**SP01 DXF is a section reference, not a laser-cut plate. Profile caps: custom removable polymer, not metal blanks.

Laser-cut pivot holes may require finishing in a fixture after welding. Check coating build at all moving contacts.

REV H CHANGE

Mesh rails changed to SP01; sleeves and splines replace clamp strips. Cross tubes raised 15 mm; nominal mesh height is now 376 mm.

ASSEMBLY ORDER

- 01

CHASSIS
Fixture F01/F02/F03 to 2000 x 1090. Fit F04/F07 closed end frames.
- 02

TABLE + DATUMS
Fit 43 F05 slats at 45 pitch. Add H05/M08 pads; locate pivots from drawing 03.
- 03

SEAT + BACK
Fit SP01 rails; cross tubes flush at top. Review weld fit to rounded underside.
- 04

BRACE + RACKS
Weld M06A/M06B in a fixture, drill pivots, fit matched M07 racks at s=325.
- 05

TRIAL ASSEMBLY
Install the selected retained pivots. Check all four notches and flat stow.
- 06

TEXTILE + FINISH
Fit sewn sleeves/splines through rail ends; tension to supplier sample, fit caps.

PROPOSED FIRST-ARTICLE DIMENSIONAL CHECKS

FEATURE	REVIEW TARGET
Overall chassis L / W	2000 / 1090 +/-2
Tube finished cut length	Nominal +/-1
H / C fixture coordinates	Nominal +/-0.3
Left / right pivot coaxiality	0.2 maximum offset
Matching rack profile	Nominal +/-0.1
Difference between chassis diagonals	2 maximum

Targets above are proposals; agree with the fabricator before cutting.

ITEMS REQUIRED BEFORE BATCH RELEASE

PIVOT HARDWARE

Select pin / bush / washer / retention stack. Provide running clearance.
Nominal pin cylinders in CAD do not specify the purchased hardware.

PROFILE + TEXTILE

Measure SP01 before cutting; confirm spline fit, seam and pretension.
T01/T02 show routing; T05/T06 are proposed DIA8 spline cores.

BRACE RETENTION

Approve anti-lift engagement and a restraint for the folded brace.
Verify equal engagement on both racks through repeated adjustment.

WELD + SURFACE SYSTEM

Confirm aluminum alloy / temper, weld procedure and compatible joint materials.
Review saddles/weld fit at F06, H03 and M04 against the actual extrusion.

FIRST-ARTICLE PERFORMANCE

Check load, stiffness, stability, fatigue, wear and pinch clearances.
No structural load rating or continuous-motion simulation is claimed.


VERIFICATION COMPLETED FOR THIS ISSUE

STEP body validity and overall 2000 x 1090 envelope.
Five poses: moving frame vs fixed frame and textile vs rails checked.
Rack engagement checks inherited; new profile geometry is provisional.
DXF profiles audited and compared with corresponding CAD plate volumes.
PDF views generated from the same Rev H solid geometry.

STATUS: FABRICATION REVIEW / NOT RELEASED FOR BATCH PRODUCTION


SECTION SP01 / 4:1

*Inferred from photo; not a measured supplier section.

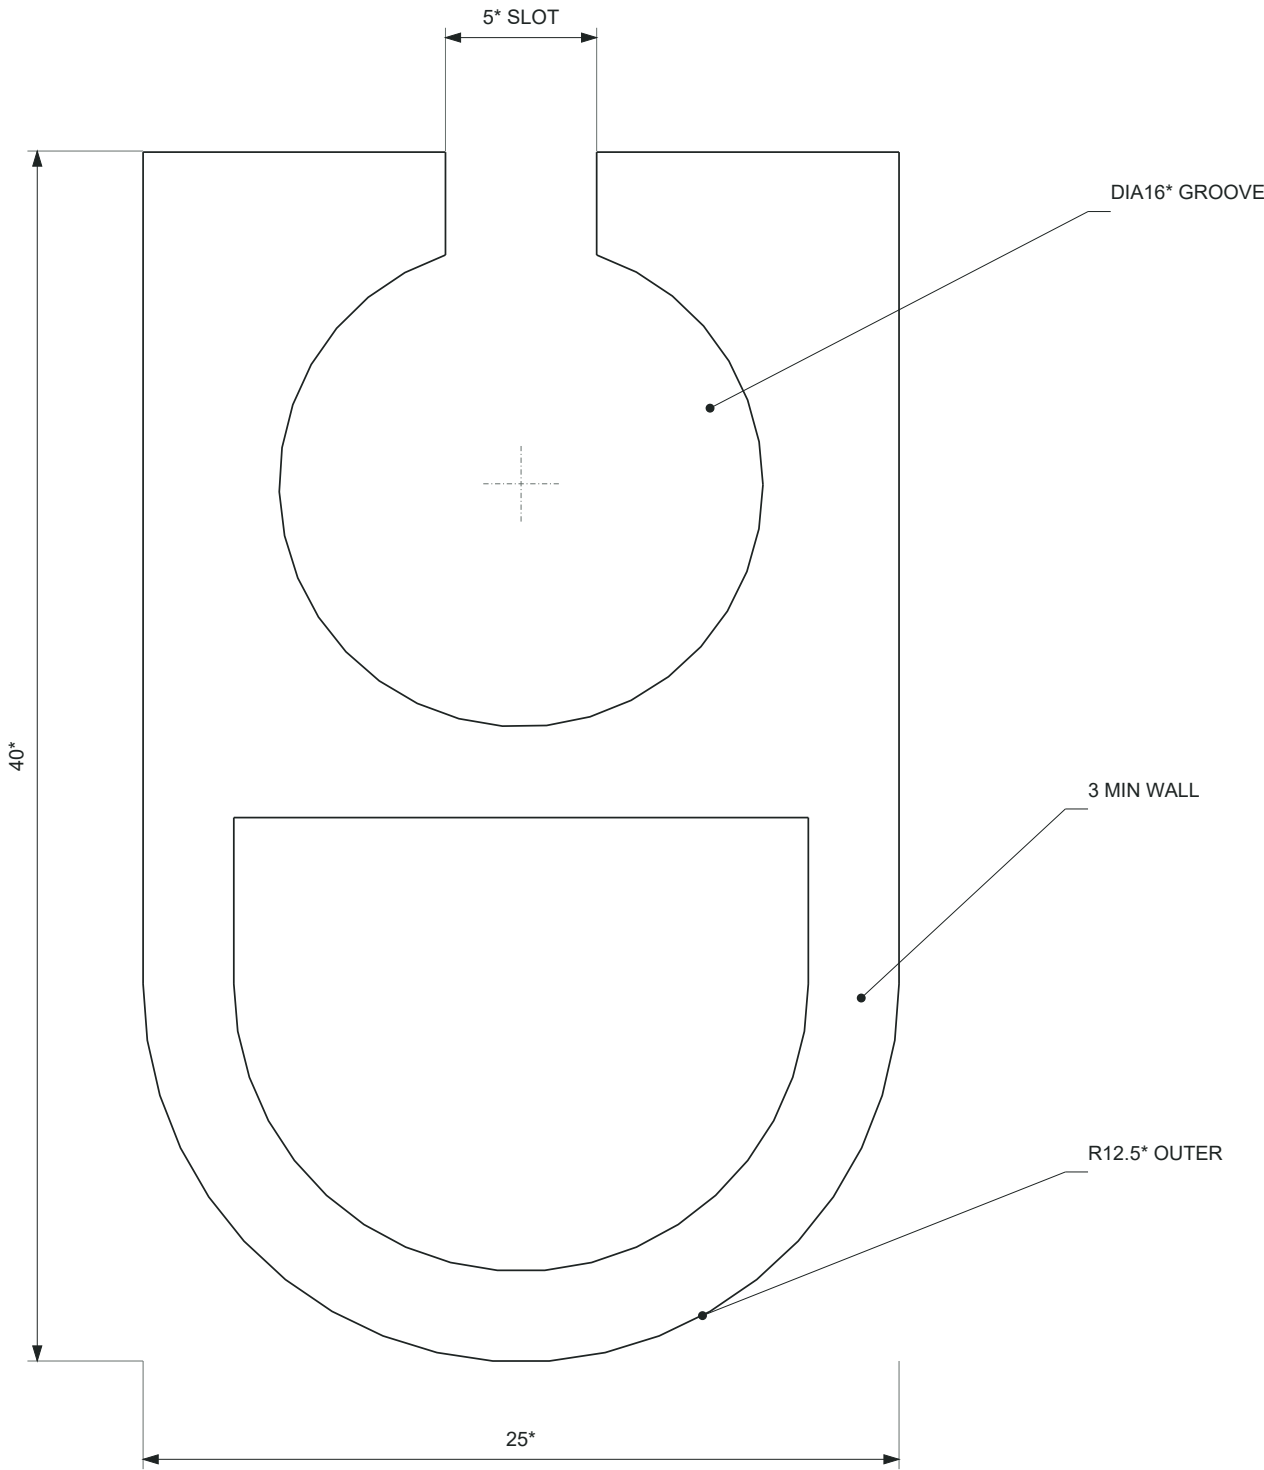

Prototype section only. Obtain physical dimensions before cutting production stock.

MESH EDGE ROUTING / ENLARGED NTS

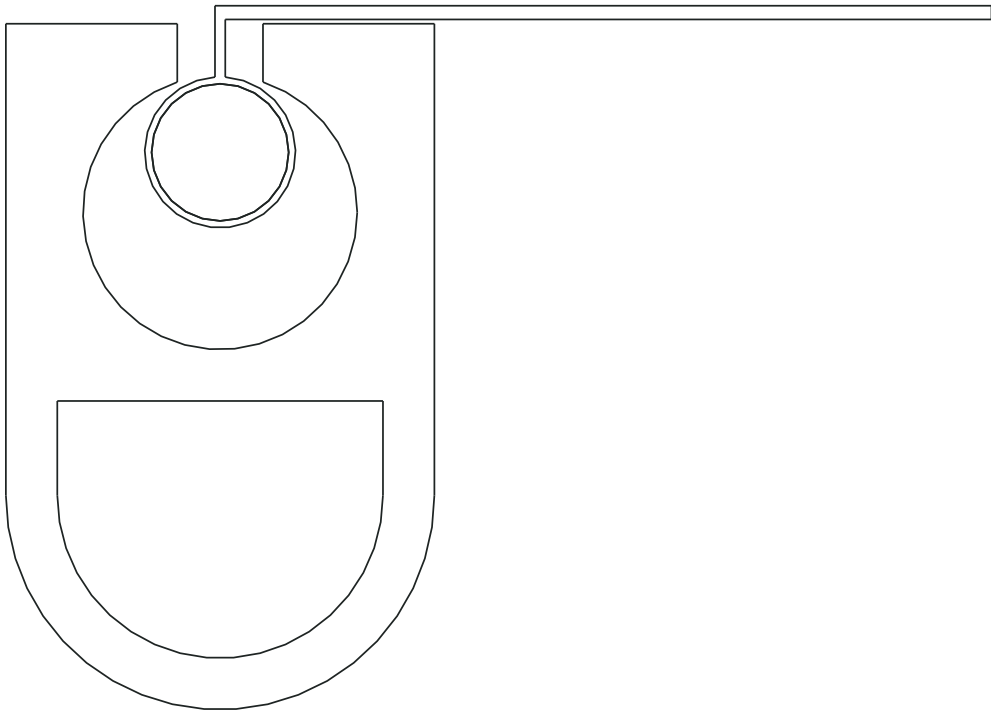

Sleeve and spline enter from the open rail end.

DIA8 spline* inside a sewn edge sleeve; 5 mm exit slot*.

Mesh turns over the inward top edge toward the seat.

PARAMETER	mm / STATUS
Wall at lower cavity / divider	3 - USER CONFIRMED
Outer W x H	25 x 40 - INFERRED
Groove / slot	DIA16 / 5 - INFERRED
Spline core / sleeve OD	DIA8 / DIA8.8 - PROPOSED
Rail top / nominal mesh top	375 / 376
Rail centers / clear opening	635 / 610

Remove caps to feed mesh; do not weld channel ends shut.

Sleeve, cord and tension are sample-fit items, not a sewing pattern.

Cross tubes: top flush with SP01; joint details require fit-up review.